
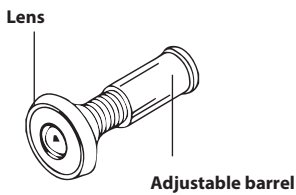


DOOR VIEWER FITTING INSTRUCTIONS

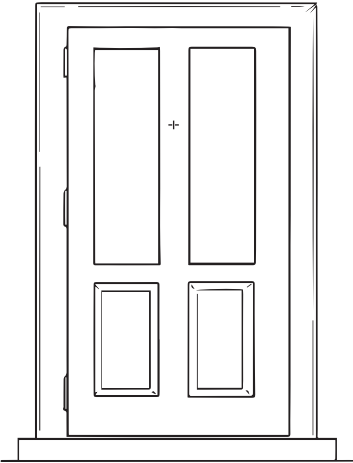

1. Use a tape measure and pencil to make a mark on the door where you want the viewer to go.
2. *If you are also fitting a door knocker, mark the holes for the knocker's mounting bolts by measuring the distance from the door viewer hole to the bolt holes and translating this to your door. Drill through the bolt hole marks for the door knocker.
3. Drill a pilot hole for the door viewer then change the drill bit to 12mm and drill through the door.
4. *Fit the door knocker to the door.
5. Unscrew door viewer into two halves, then insert the half with the lens through the outside of the door.
6. Insert the half with the privacy cover into the inside of the door. Attach the free fitting tool to your drill and place it on the end of the viewer barrel. Screw the two halves together using the drill.

*Skip this step if you are not fitting the door viewer into a door knocker.

MAINTENANCE

Once a year clean the chain with a mild soap solution diluted in water. Dry off the chain with a lint free cloth.